

USER GUIDE FOR NETmc MARINE DVR Pro Server



Rev 1.03
May 2006

Contents

Section	Description	Page
1	Introduction	3
2	System description	4
2.1	Hardware description and connections	4
2.2	Network configuration / DVR interface	
3	Operating Instructions	
3.1	Software Setup	
3.2	The Set-up Page	
3.3	Injecting NAV data	
3.4	Making a recording	
3.5	Playing a file	
3.5.1	Using Windows Media Player™	
3.5.2	Using the NETmc Marine Viewer	
4	FAQS	
5	Appendices	
	Appendix i – Technical specifications	
	Appendix ii – Definitions & Abbreviations	

NETmc Marine
Dunann Cottage, Turfhill, Cuminestown Road
New Deer, Aberdeenshire
AB53 6TL
TEL. +441771644001
Fax. +441771644005

1 Introduction

NETmc Marine specialises in the design and manufacture of Digital Video Solutions for the Offshore market and have produced a range of digital video acquisition systems ranging from single channel digital video recorders to bespoke multi-channel systems for online data management and retrieval.

When inspecting pipelines with 3 camera views being recorded – the DVR Pro server is required.

The server is a network attached device, which has to be used in conjunction with 3 NETmc Marine video recording units (DVR Inspector, Peli or mediaVT spec units).

The server takes control over the 3 encoder units (their local control interfaces are no longer required), synchronising their outputs, and combining them into one single mpeg compliant media file (pkt).

The Pro Server can also be fed with a serial string from an online NAV package.

This string is then saved as a flat data file along with the video files (ssn file) – and is also woven into the mpeg compliant video where is always associated with the video and can be striped out by any enabled player or GIS system.

This manual details how to interface the Server to 3 DVR Inspector units – and how to setup the inbound nav string.


2 System Description

2.1 Hardware Description and Connections

The Pro Server is a rack mountable unit running on a Windows 2000 platform. It is housed in 2U high casing and encompasses.

All connections are on the rear panel as shown below, as is the on/off button for the internal power supply unit and the cooling fan outlet. The power supply switch must be in the on (1) position for the recorder to function; it is good practice, but not essential, to switch the internal power supply off when the recorder is not in use.

On the front panel of the recorder is found the main ON button, the receptacle (where fitted) for the removable drive and a small screen beside which there are 4 black buttons, these buttons are for the control of the menus that are displayed on the screen. These screens are primarily displaying status indicators and so, under normal circumstances, the operator need not concern themselves with them.

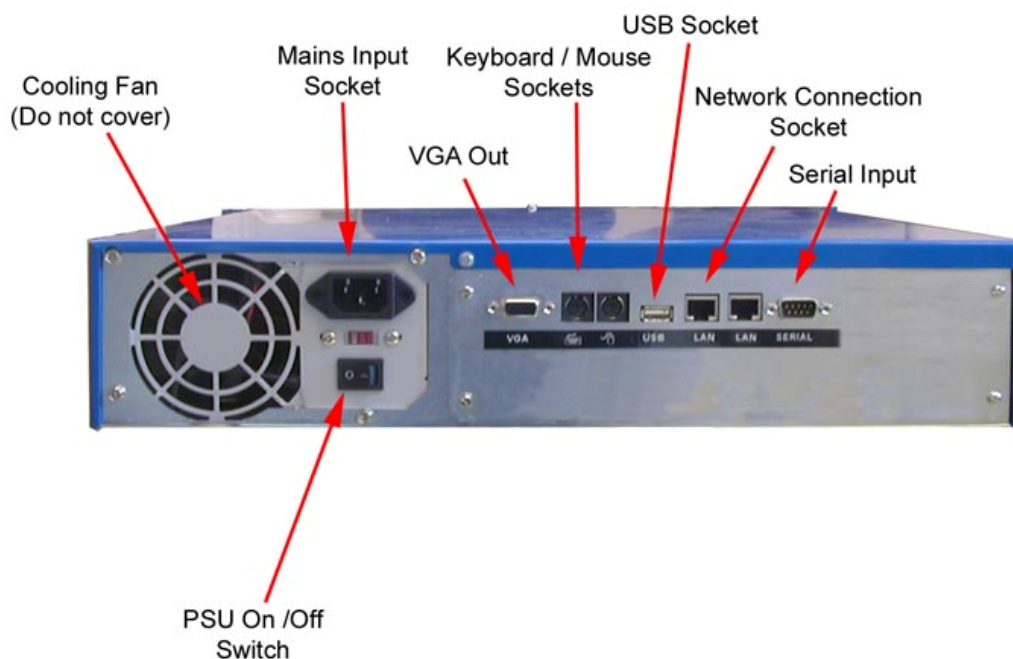

2 System Description

2.2 Network configuration / DVR interface

To make use of the Pro Server – it should be connected to 1 or more NETmc video recorders – either DVR Inspector, Pelicase or mediaVT units.

The video recorders and the Pro Server should all be on the same network – connected via a switch (100 mbps minimum).


All the network (IP) addresses of the units should be of the same range – by default, encoders and servers will ship as 192.168.1.xxx - - where xxx is the last 3 digits of the serial number.

The Pro server has a small amount of internal storage – but it is typical to target any recorded video at a network attached server (NAS) or some other network resource with sufficient free disk space.

USB storage devices can also be plugged directly into the back of the server.

To view and edit settings – a keyboard / monitor and mouse should be connected to the server.

A typical hardware configuration would be:

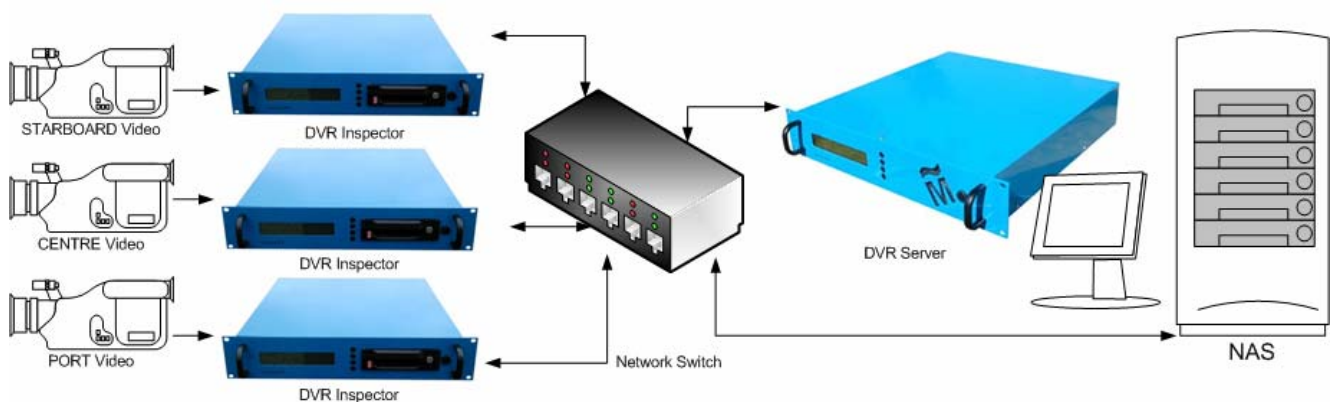


It is good practise to start encoders and NAS units before the Pro Server – so that as the server starts, it scans for devices it can use. If not started first – it will still find the other devices – but there will be a short delay as it polls in a timed sequence.

3 Operating Instructions

3.1 Software Setup

When the server boots up – it should auto start the DVR Pro application. If it does not autostart – the application can be launched by double clicking the desktop icon.

Once started – the DVR Pro application will look like:

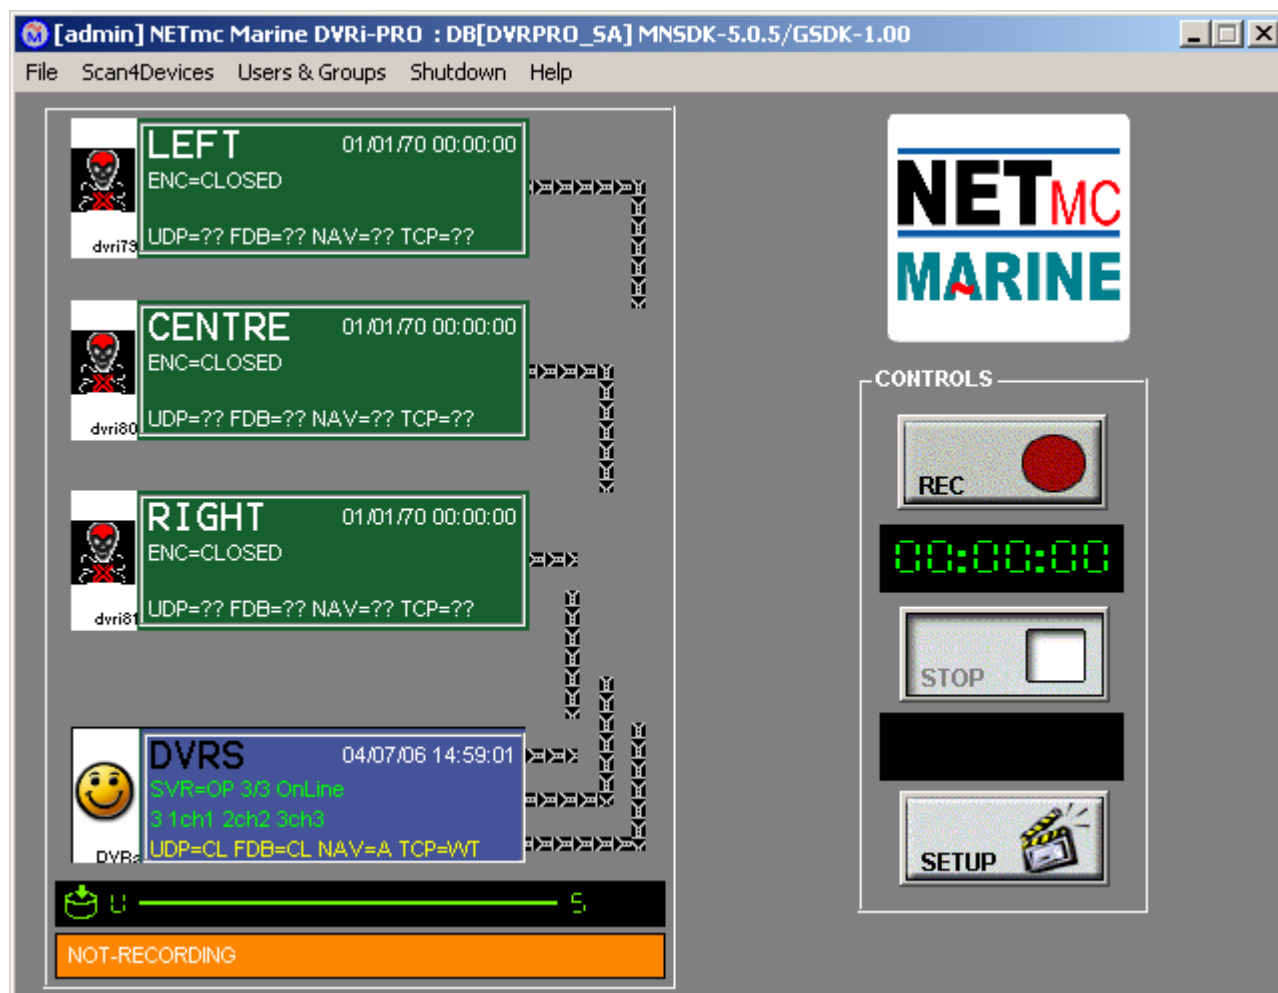


Unless the server has been pre-configured with the particular encoders – there will be no smiling faces ☺ beside each encoder – and the links between the encoder and the server will be broken.

The next step is to identify to the software which encoders are available – and which one is being used for which channel.

First step is to see which encoders are available and correctly configured on the network. From the toolbar on the main screen – click 'Scan4Devices'.

This will query the network that the Pro Server is attached to see if there are any mediaNET compliant encoders powered up and configured correctly.

The screen will look something like:

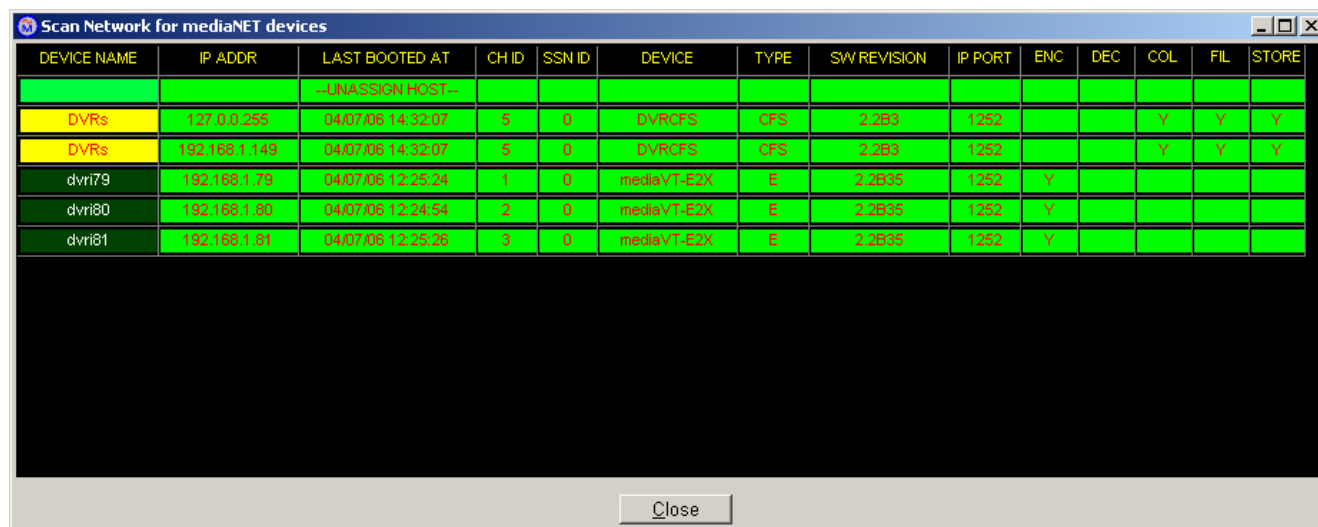

The screenshot shows a window titled "Scan Network for mediaNET devices". Inside is a table with the following columns: DEVICE NAME, IP ADDR, LAST BOOTED AT, CH ID, SSN ID, DEVICE, TYPE, SW REVISION, IP PORT, ENC, DEC, COL, FIL, and STORE. The table contains several rows of data, including a header row, a separator row, and rows for DVRs and encoders.

DEVICE NAME	IP ADDR	LAST BOOTED AT	CH ID	SSN ID	DEVICE	TYPE	SW REVISION	IP PORT	ENC	DEC	COL	FIL	STORE
--UNASSIGN HOST--													
DVRs	127.0.0.255	04/07/06 14:32:07	5	0	DVR/CFS	CFS	2.283	1252			Y	Y	Y
DVRs	192.168.1.149	04/07/06 14:32:07	5	0	DVR/CFS	CFS	2.283	1252			Y	Y	Y
dvri79	192.168.1.79	04/07/06 12:25:24	1	0	mediaVT-E2X	E	2.2835	1252	Y				
dvri80	192.168.1.80	04/07/06 12:24:54	2	0	mediaVT-E2X	E	2.2835	1252	Y				
dvri81	192.168.1.81	04/07/06 12:25:26	3	0	mediaVT-E2X	E	2.2835	1252	Y				

At the bottom of the window is a "Close" button.


If you cant see all your devices in this list – there is a network problem. Check all cables, connections and TCP/IP settings on each unit.

As you can see in the above example – there are 3 encoders (type = E) – called dvri79, dvri80 and dvri81.


There is one server called DVRs – whose external IP address is 192.168.1.149 - - it is a collator / filer and server (type = CFS) - - - this is what is required to gather, save and control the slave encoders.

If all encoders are listed – this window can be closed and the encoders associated with each channel.

To assign an encoder to a particular channel – right click on the white area to the left of the encoder summary window – in the example below – it's the left (port) encoder which is about to be configured.

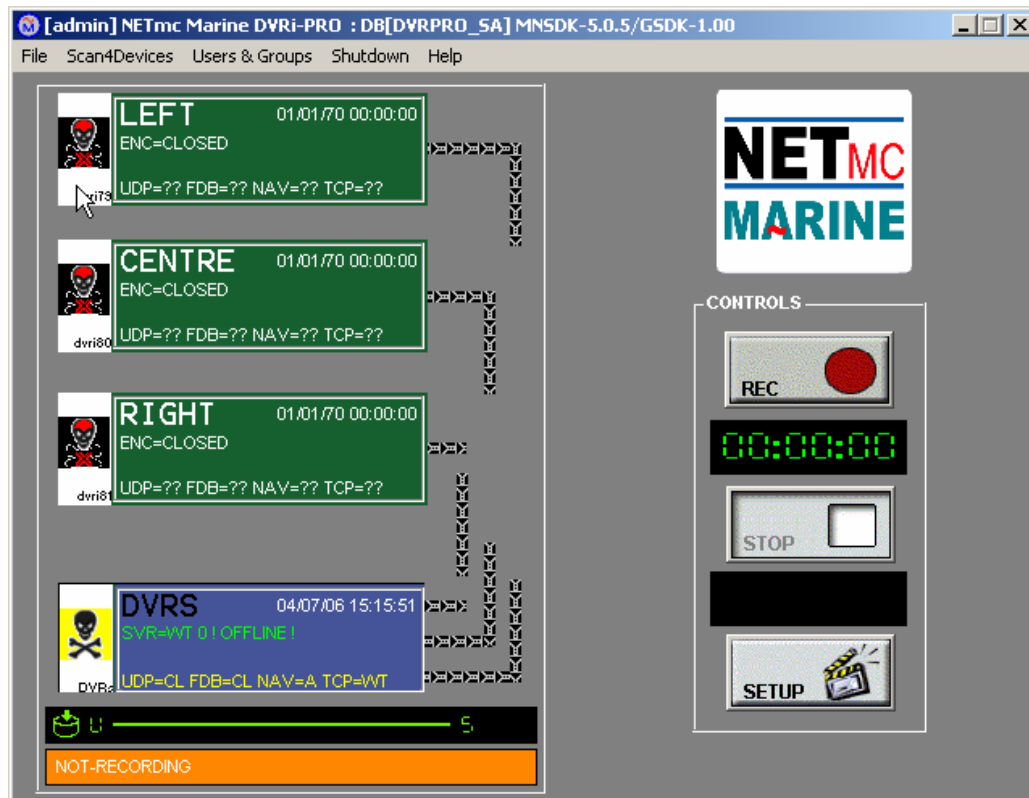

When the drop down menu appears – select the 'Assign to mediaVT' option

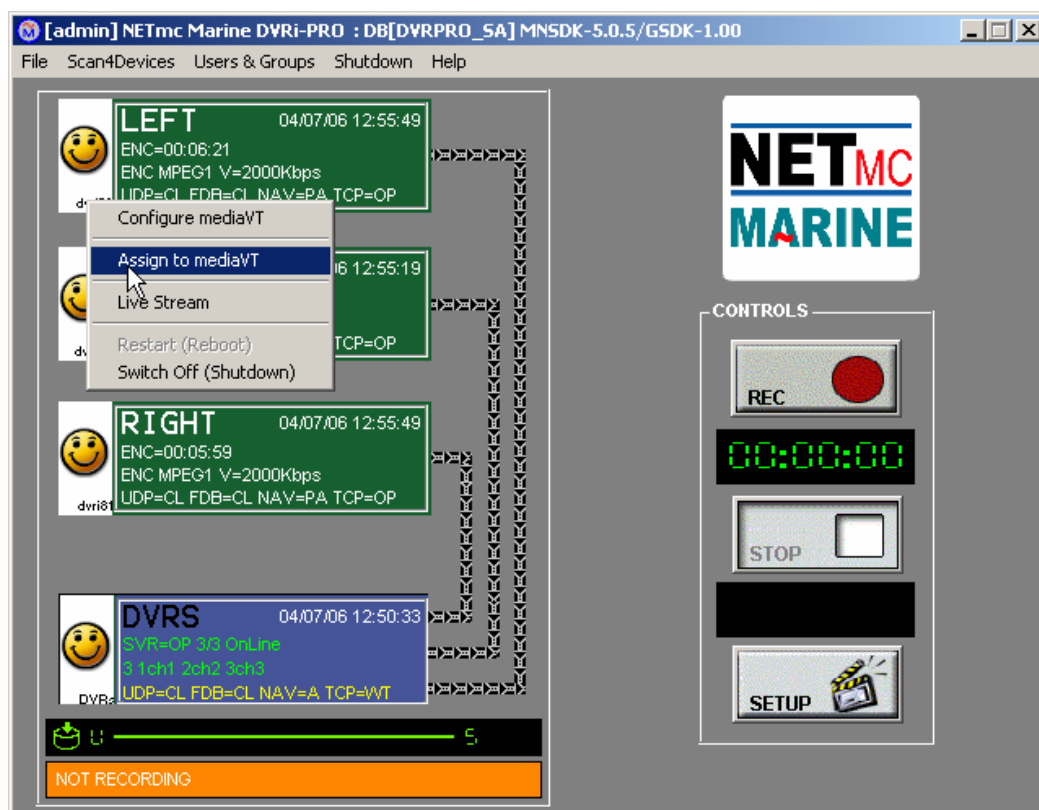

The assignment menu will then open:

CHAN	CHANNEL NAME	Channel	Id
ANY	Any	**ANY**	0
LEFT	LEFT	LEFT	1
CENTRE	CENTRE	CENTRE	2
RIGHT	RIGHT	RIGHT	3

RACK	VT	CHANNEL	MEDIAVT	VT IP ADDRESS
1	1	LEFT	dvri79	192.168.1.79
1	2	CENTRE	dvri80	192.168.1.80
1	3	RIGHT	dvri81	192.168.1.81

APPLY ASSIGNMENT RESET TO ORIGINAL CANCEL

The channel you are about to assign an encoder to should be highlighted in blue by default (left / port channel in this example).

With the appropriate channel selected – click on the ‘ASSIGN MEDIAVT’ tab.

DEVICE NAME	IP ADDR	LAST BOOTED AT	CH ID
--UNASSIGN HOST--			
DVRs	127.0.0.255	04/07/06 12:15:23	5
DVRs	192.168.1.149	04/07/06 12:15:23	5
dvri81	192.168.1.81	04/07/06 12:25:26	3
dvri79	192.168.1.79	04/07/06 12:25:24	1
dvri80	192.168.1.80	04/07/06 12:24:54	2

RACK	VT	CHANNEL	MEDIAVT	VT IP ADDRESS
1	1	LEFT	dvri79	192.168.1.79
1	2	CENTRE	dvri80	192.168.1.80
1	3	RIGHT	dvri81	192.168.1.81

APPLY ASSIGNMENT RESET TO ORIGINAL CANCEL

click on the line which contains the encoder information you wish to associate with that channel – in this example, we are going to allocate dvri79 to the left / port channel. When the line is selected – it is highlighted in blue.


DEVICE NAME	IP ADDR	LAST BOOTED AT	CH ID
--UNASSIGN HOST--			
DVRs	127.0.0.255	04/07/06 12:15:23	5
DVRs	192.168.1.149	04/07/06 12:15:23	5
dvri81	192.168.1.81	04/07/06 12:25:26	3
dvri79	192.168.1.79	04/07/06 12:25:24	1
dvri80	192.168.1.80	04/07/06 12:24:54	2

RACK	VT	CHANNEL	MEDIAVT	VT IP ADDRESS
1	1	LEFT	dvri79	192.168.1.79
1	2	CENTRE	dvri80	192.168.1.80
1	3	RIGHT	dvri81	192.168.1.81

APPLY ASSIGNMENT RESET TO ORIGINAL CANCEL

Then click ‘APPLY ASSIGNMENT’


A box will pop-up asking you if you want the server to automatically setup the encoder.

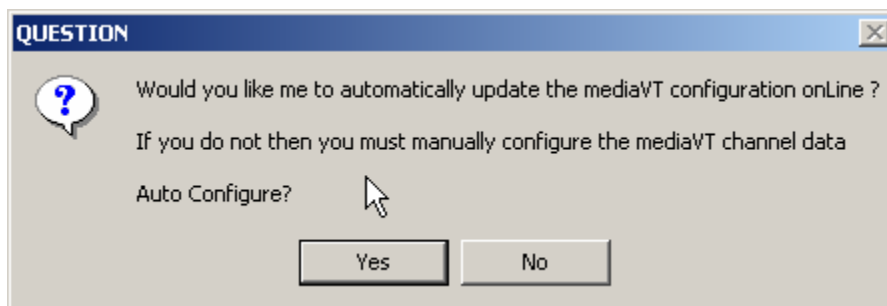

This should almost always be answered 'YES' - - unless you are an expert user or have encoders which are permanently assigned to a set task.

Most operators use their encoders for different tasks (e.g. structural inspection etc) – which makes it essential that the pipeline system is allowed to tweak the configuration to suit - - thus pressing 'YES'

This assignment procedure should be repeated for each channel (centre and right / port) - - after which – the main display should have smiling faces next to each channel:

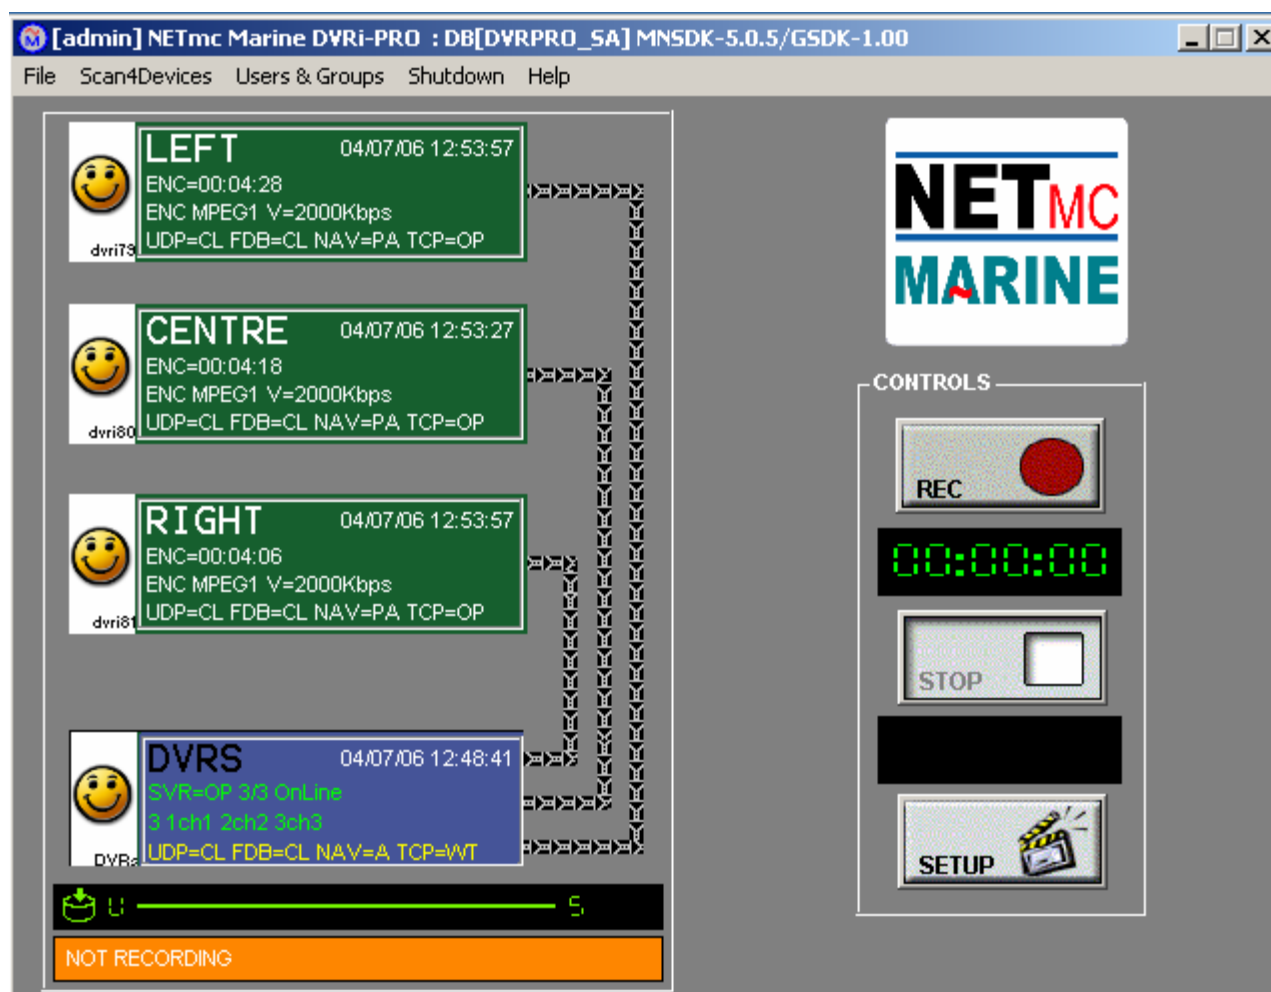

3 Operating Instructions

3.2 The Setup Page

Once the encoders are setup and configured – the final user options are controlled via the setup pages – accessed by clicking the large setup button beneath the record / stop buttons on the main screen.

The screenshot shows the 'INSPECTOR PRO - SETUP' window. It is divided into several sections:

- APPLICATION:** Includes checkboxes for 'ENABLE KEYBOARD SHORTCUTS' and 'ALWAYS ON TOP'.
- DEVICE:** A table showing network configurations for the server and three encoders.
- FORMAT:** Radio buttons for 'MPEG 1', 'MP3', 'MPEG 2', and 'MPEG 4'. 'MPEG 1' is selected.
- SOURCE:** Radio buttons for 'BNC', 'Y/C', 'PAL', and 'NTSC'. 'BNC' and 'PAL' are selected.
- QUALITY:** Radio buttons for 'MPEG1' (LOW, MED, HIGH, SUPER) and 'MPEG2' (LOW, MED, HIGH). 'MPEG1' is selected, and 'HIGH (2M)' is chosen. A 'SPECIAL' section has a value of '2,000,000'.
- VIDEO STORAGE FORMAT:** Radio buttons for 'MPEG ONLY' and 'PKT WITH EMBEDDED NAV'. 'PKT WITH EMBEDDED NAV' is selected.
- MAXIMUM SEGMENT SIZE:** Radio buttons for 'DURATION IN SECONDS' and 'SIZE IN KBYTES'. 'DURATION IN SECONDS' is selected, with a value of '300'.
- VIDEO FILE LOCATION, SHARE AND TEMPLATES:** Includes fields for 'STORE PATH' (E:\videotuesday_test), 'VIDEOFILE PREFIX' (TEST_), 'NETWORK SHARE' (video), and checkboxes for 'Add SEQNO', 'DATE', and 'TIME'. A 'RESET SSN=69' button is also present.

At the bottom are buttons for 'APPLY', 'RE-APPLY', 'RESET', and 'CLOSE'.

Device	Name/IP	IP Address
SVR	DVRs	192.168.1.149
ENC1	dvri79	192.168.1.79
ENC2	dvri80	192.168.1.80
ENC3	dvri81	192.168.1.81

The screen is split into various sections – some for information – some for user changes.

The device section top right – is for information only. It shows / confirms the current configuration of encoders and server – lists their network names and IP addresses.

The lower half of the screen is interactive – users can click on parameters here to change what is recorded, what quality / format, what the files are called, how big they are – and where they are saved.

Format:

If you have mpeg 2 encoders you will be offered a choice of mpeg 1 or mpeg2.
If not – only mpeg1 will be an option.

Source:

Each encoder should use the same video input connection and format.
This will be dependant in the camera source – but in the UK, the source will be PAL
Most ROV system will use a regular BNC co-ax for the connection.

Quality:

This is where the bitrate of the video is selected.
If mpeg 2 encoders are available – the choice of bitrate will be higher

Video Storage Format:

Material from the Pro Server has to be pkt – as this identifies to enabled player that the files contain multiple camera views and navigation data.

Maximum Segment Size:

No one want huge video files. They are difficult to edit / store and distribute.
Most users select 300 seconds as the max duration – so that their files are never more than 5 minutes long.

Video File location, Share and Templates:

Store Path is where the files will be stored. This can be a local drive – network UNC path or mapped drive.

Videofile Prefix allows the use to insert a job or component specific prefix to the video file which is created.

Add SEQNO:

Once record has been pressed – the file name will have a number added to it. During the course of that recording session (until stop is pressed) – the numbers will increment.

Add DATE:

Will add current date to the file name

Add Time:

Will add current time to the file name

RESET SSN=xx

Shows current sequence number in xx. Clicking will reset to 0

APPLY / Re-APPLY

After making a change – RE-APPLY will ensure that all encoders have their settings refreshed. This is most valid for a video quality or source change etc. It is also worth doing prior to starting recording if there is a suspicion that the encoder may have been altered since last used (e.g. used for structural inspection)

Apply does not address encoders – so is useful if its just the file name or path that has been changed

3 Operating Instructions

3.3 Injecting NAV Data

If available – it is good practise to inject the Pro Server with a real-time navigation string from the survey NAV computer.

This has 2 effects. Firstly – the string is converted into a flat file and related to the video filenames – stored in a .ssn file – which will be found in amongst the video files. It also embeds the navigation information directly into the mpeg headers. This allows enabled players to read and display those navigation records during the replay of the video. It also allows enabled GIS packages to strip the information out of the video files and reconstruct a relational database of navigation positions Vs video file and position within that file.

The server requires a bespoke string to be setup as an output on the Survey computer. It should be set to 9600,8,N,1 - -with an update rate of around 1Hz- - and plugged into the 9way serial connector on the rear of the Pro Server – in NULL-modem configuration (pin 2->3, pin 3->2, pin 5->5).

(normally – the position being output is the reference point of the camera on the vehicle which is being recorded).

The data string should be configured as:

1	2	3	4	5	6	
123456789012345678901234567890123456789012345678901234567890						

dd mm yy tt:tt.tt eeeeeee.eennnnnnnn.nnnkkk.pppdddd.cc

DATE TIME EASTING NORTHING KP DCC

EXAMPLE:

28 03 00 15:58:28.22 556492.196342211.19 -9.336-720.54

DECODE

28/3/00
15:58:28.22
Easting: 556494.19
Northing: 6342211.19
KP: -9.336
DCC: -720.54

3 Operating Instructions

3.4 Making a recording

With everything configured – the path for the video and the file naming conventions set – actually making a recording is very simple.

Simply click the “record” button on the main control panel:




If the unit successfully starts recording – the button will indent, and the counter will start to increment:



If the button refuses to indent – it is because it cannot start recording for some reason. Typically this will be because the path name for the video doesn't exist – or the drive is full or something along those lines.

On clicking record – you may have a pop-up message appear:

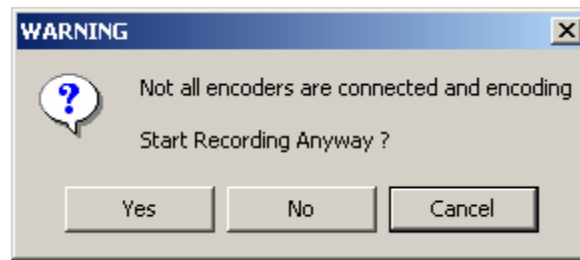

You may have intentionally decided to start recording without all encoders being active - - this maybe perfectly valid (as you only have 2 encoders for example). If its not your intention – you need to go back through the assignments to see if you have any configuration errors.

3 Operating Instructions

3.5 Playing a file

Playing a multichannel pkt file with NAV data can only be done properly once the NETmc filters have been installed.


The Pro Server will have these installed by default - - but the easiest way to install these filters on another computer is to install our client viewer – which freely available from our website.

3.5.1 Using Mediaplayer

If you navigate to the folder which contains the pkt files using windows explorer – you can double click a pkt – which will automatically open windows media player to open the file.


If the pkt has multiple video channels – 2 slave windows will automatically open which in conjunction with the main mediaplayer console – will show all 3 images perfectly synchronised.

(you will have to arrange the windows manually on your desktop to get the layout that suits your environment).

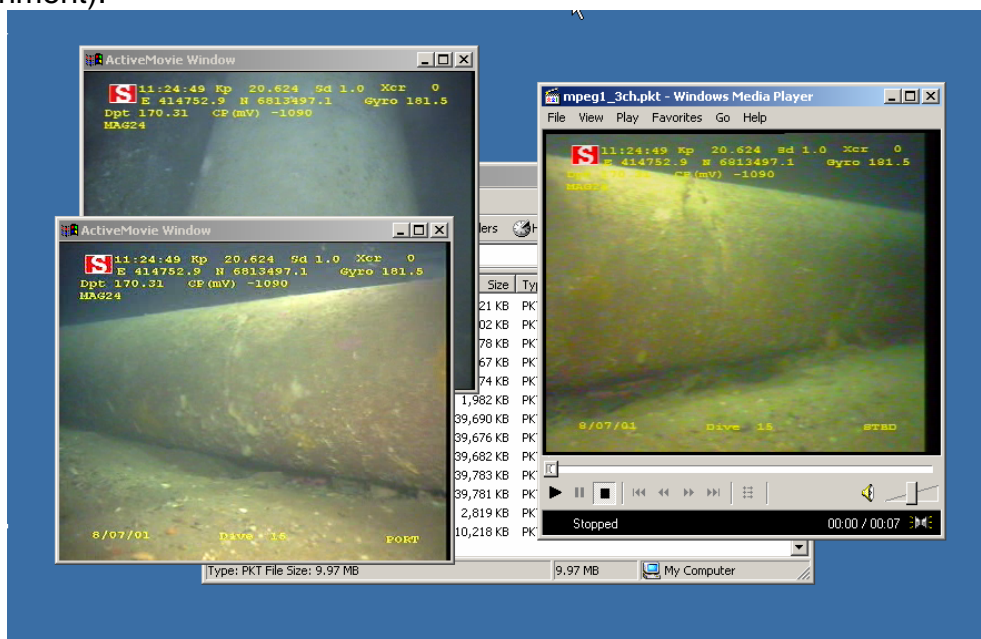

Using the scroll bar on windows mediaplayer will skip through all 3 video channel with the same ease as navigating 1.

If the pkt file has nav data embedded in it – an error may be observed – this is because media player has no window to render the NAV data into:

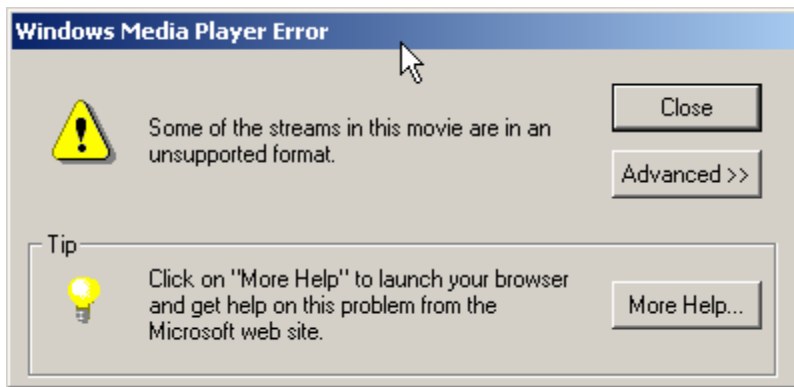

To prevent this message appearing – you need to use a viewer which has a facility to replay the nav data – as well as the video.

3.5.2 Using NETmc Marine Viewer

Alternatively, the video can be viewed in our free client viewer.

If the 3head option is selected during install – the player will open in a mode optimised for pipeline video.

Simply use the folder icon to browse for pkt file – select the one you want to open – and the click play to run the video.


The nav data is display in the window above the centre picture – and can be seen to update as the video runs.



4 FAQs


Q. My unit has a broken link between one of the encoders – and says CFG ERR under an encoder. I don't know what it means – or how to remove it.

A: CFG ERR is drawing your attention to the fact that the setting which have been applied, aren't right for proper operation.

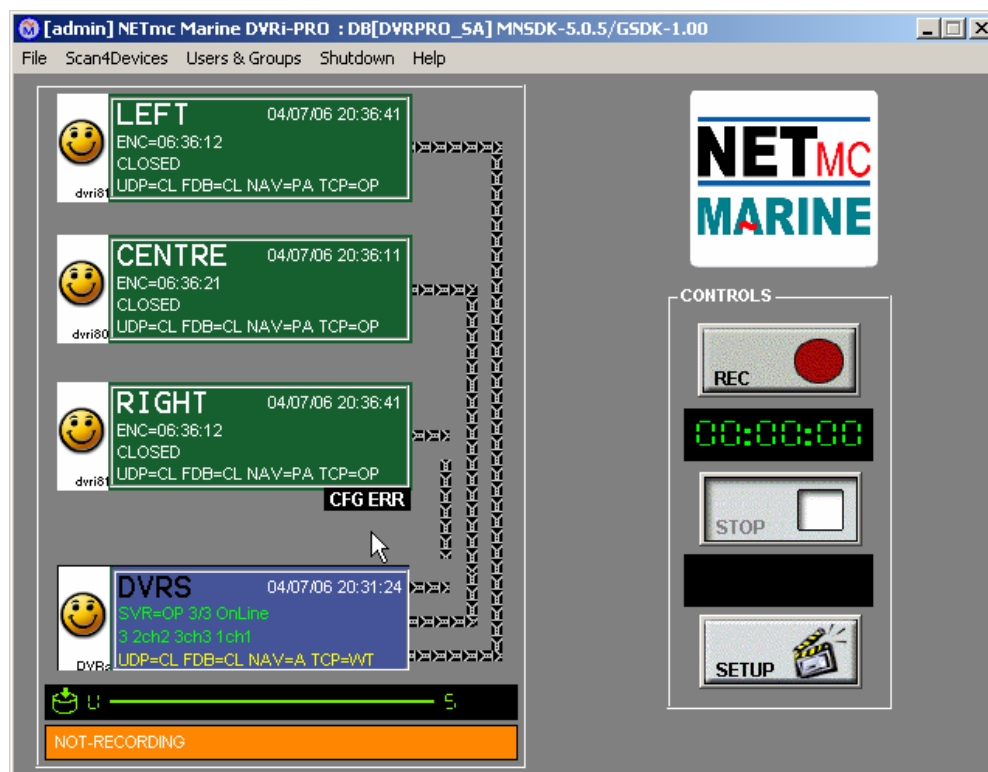

This is most likely due to there not being a unique channel associated to each recorder – e.g. you have used the same encoder for more than one channel.

In the above example – by right clicking next to the encoder with the CFG ERR and selecting ASSIGN TO MEDIAVT - - we can see that the problem here is that we have 2 units trying to use channel 1.

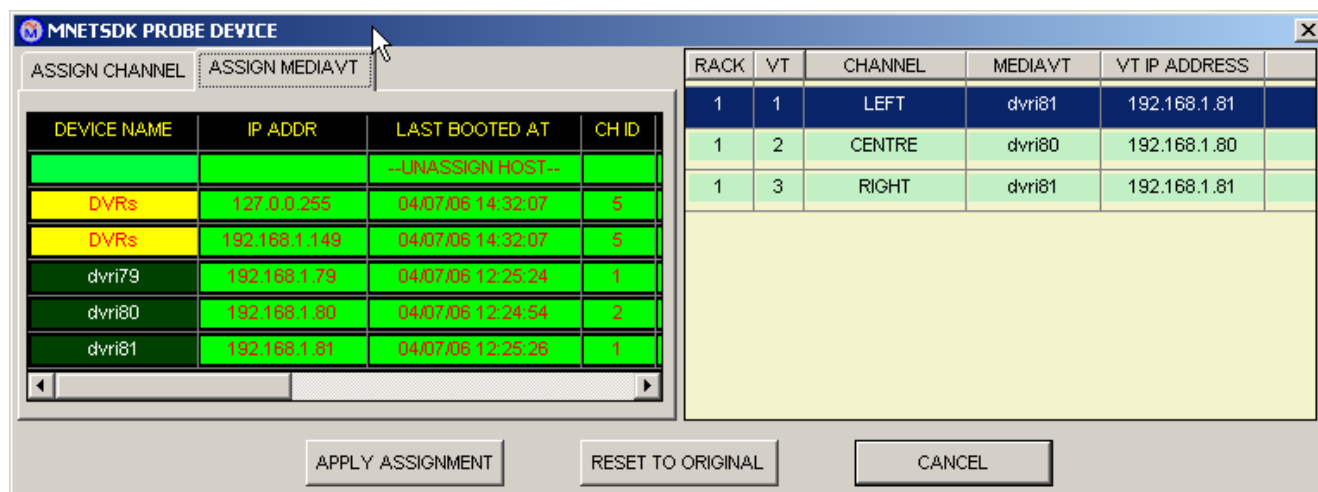

The fix here is to re-apply the settings to dvri81 to confirm that it is channel 3.

It may be necessary to apply a different channel assignment to device first – and then go back in to confirm the correct settings.

This is because the GUI may think there is no need to change anything (because the change was done via remote control or a different console etc) so wont re-apply the settings if it believes them to be the same.

The screenshot shows the 'MNETSDK PROBE DEVICE' window with two tabs: 'ASSIGN CHANNEL' and 'ASSIGN MEDIAVT'. The 'ASSIGN CHANNEL' tab is active, displaying a table with columns: CHAN, CHANNEL NAME, Channel, and Id. The table contains four rows: '**ANY**' (Any, **ANY**, 0), 'LEFT' (LEFT, LEFT, 1), 'CENTRE' (CENTRE, CENTRE, 2), and 'RIGHT' (RIGHT, RIGHT, 3). The 'LEFT' row is highlighted. Below the table is a large empty yellow box. To the right of the main window is a smaller table with columns: RACK, VT, CHANNEL, MEDIAVT, VT IP ADDRESS, and an empty column. It contains three rows: (1, 1, LEFT, dvri79, 192.168.1.79), (1, 2, CENTRE, dvri80, 192.168.1.80), and (1, 3, RIGHT, dvri81, 192.168.1.81). At the bottom of the window are three buttons: 'APPLY ASSIGNMENT', 'RESET TO ORIGINAL', and 'CANCEL'.

CHAN	CHANNEL NAME	Channel	Id
ANY	Any	**ANY**	0
LEFT	LEFT	LEFT	1
CENTRE	CENTRE	CENTRE	2
RIGHT	RIGHT	RIGHT	3

RACK	VT	CHANNEL	MEDIAVT	VT IP ADDRESS	
1	1	LEFT	dvri79	192.168.1.79	
1	2	CENTRE	dvri80	192.168.1.80	
1	3	RIGHT	dvri81	192.168.1.81	

Q. When I double click the pkt file – it only opens one window – and the video appears gerky. It should have been triple channel pipeline footage.

A. you either have no filters installed – or they have been optimised for structural survey applications. Re-install the free client viewer and check the “3head” install option.


Q. I have already interfaced to the DVRi units to start and stop recording, name files etc. Can I control the Pro system in a similar way ?

A. Yes – in fact, the same commands are valid – with some additional ones to enquire as to the position in the file at any one time.

Ask your sales / support contact for more details.

Q. Some times when I first play my multi channel video – one of the windows is blank. I've noticed that if I move the window – a picture appears in it. Why is this ?

A. Your computer has hardware acceleration on the VGA card – it is trying to grab the handle from that video window and assist in its render. From the START button, select RUN and enter dxdiag and click run. When the window opens – pick display (or display1) and ensure the DirectX Features are all disabled:

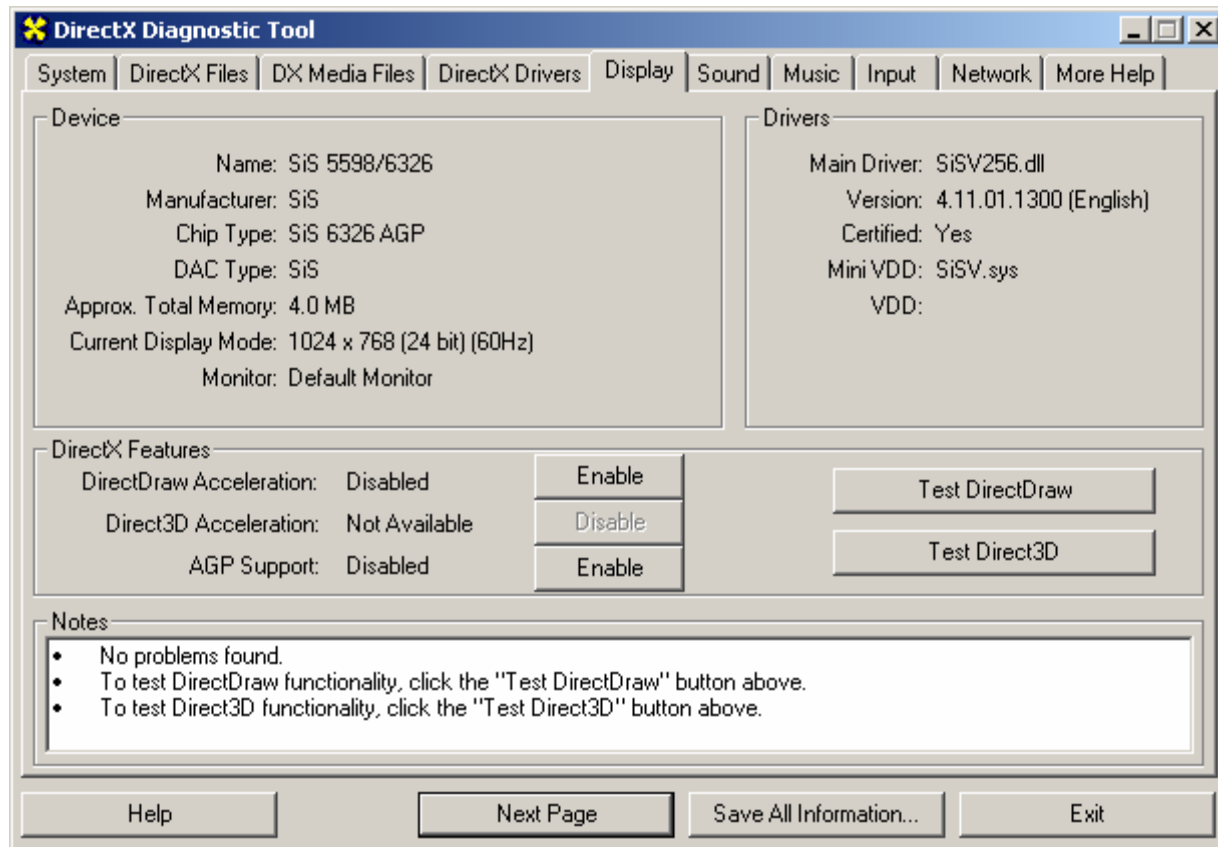

Appendix i

Technical Specifications

Power Requirements	100 - 260 Vac, 50 - 60 Hz
Power Consumption	180w
Operating Temperature	10 - 35 Degrees
Non-operating Temperature	-10 - 60 Degrees
Operating Humidity	5-95% RH non-condensing
Non-operating Humidity	5-95% RH non-condensing
Operating Shock (read)	65G, 2ms
Non-operating Shock	250G, 2ms
Operating Altitude	-305m – 3,050m
Non-operating Altitude	-305m – 12.200m
Operating Vibration	Linear 20-300Hz, 0.75G (0 to peak) Random 10-300 Hz, 0.004g ² /Hz
Non-operating Vibration	Low frequency 5-20 Hz, 0.195 inches (double amplitude) High frequency 10-300Hz, 5.0G (0 to peak)
Dimensions	482(W) x 88.5(H) x 455(D) (2U case)
Weight	15kg
Network Support	10 / 100 Base T & 10/100/1000
Serial Ports	9 Way D-Type for serial navigation

Storage and shipping

After overnight road freight the units should be left at room temperature for 24 hours before powering on.

After air freighting the units should be left at room temperature for 48 hours before powering on.

Appendix ii

Definitions & Abbreviations

Definitions

DVRi DVR Inspector Single Channel Digital Video Recorder

Abbreviations

ASCII American Standard Code International Interchange

DB Database

DLT Digital Linear Tape

DRS Digital Review Suite

DVR Digital Video Recorder

HTML Hyper Text Mark-up Language

MPG Moving Pictures Expert Group File extension for a video file

MPEG1 Industrial recording format, controlled by the Moving pictures expert group
Payable on all Windows operating systems win95 ->

PKT Packet File Extension

PAL Phase Alternation by Line – the European video format

NTSC National Television Standards Committee – American / Asian video format

JPEG Joint Photographic Experts Group

Mbps Mega bits per seconds – rate of video encoding

QC Quality Control

USB Universal Serial Bus

Store path Local on hard-disk where the video will be placed

SVHS Super Video Home System

TIFF Tagged Image File Format

End of Document